


1) Start with the JBH cap with the thread cover ring.

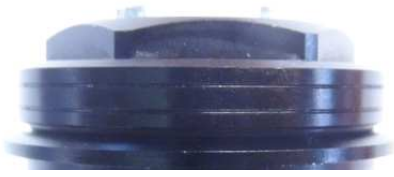

2) Unscrew the ring from the JBH cap.



3) Now, you've got the cap without the ring.



4) Apply a small amount of grease to the o-ring and tighten the cover.



5) Voila! Cap with cover, ready to roll.

