Electrical Components Location

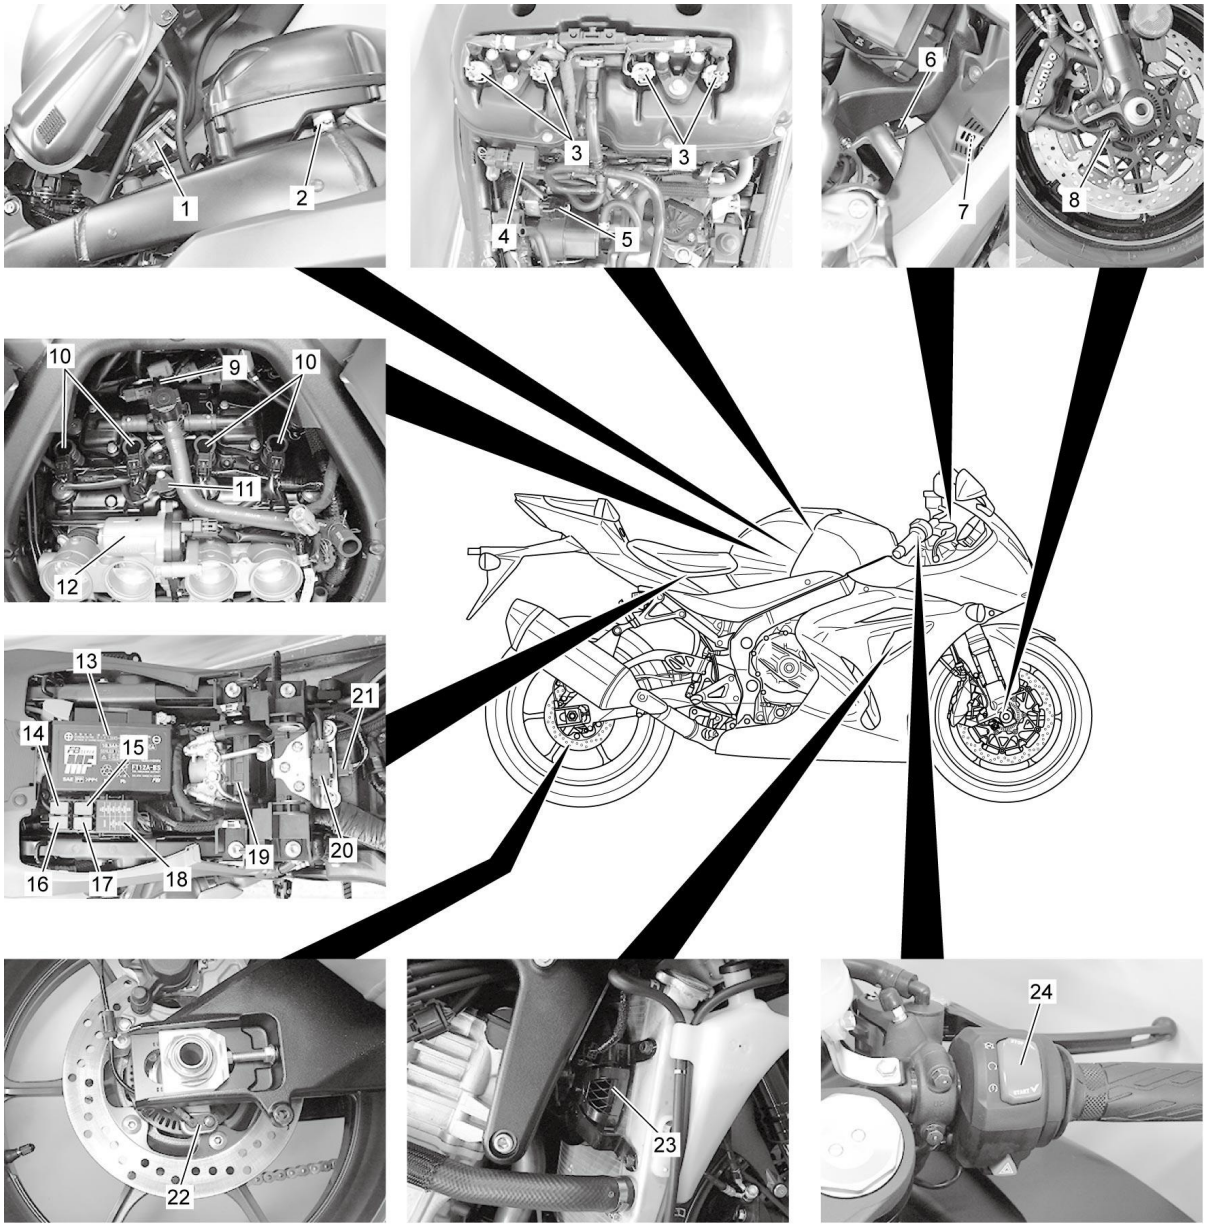

1. Fuel pump/Fuel level gauge	9. PAIR control solenoid valve	17. Side-stand relay
2. IAT sensor	10. Ignition coil	18. Fuse box

3. Secondary fuel injector	11. CMP sensor	19. ABS control unit/HU (With ABS)
4. IAP sensor	12. Throttle valve motor	20. TO sensor
5. EVAP system purge control solenoid valve (If equipped)	13. Battery	21. Inertial sensor
6. Steering damper solenoid valve	14. Fuel pump relay	22. Rear wheel speed sensor
7. Ambient air temperature sensor	15. Cooling fan relay	23. Cooling fan motor (RH)
8. Front wheel speed sensor	16. High beam relay	24. Engine stop / starter switch

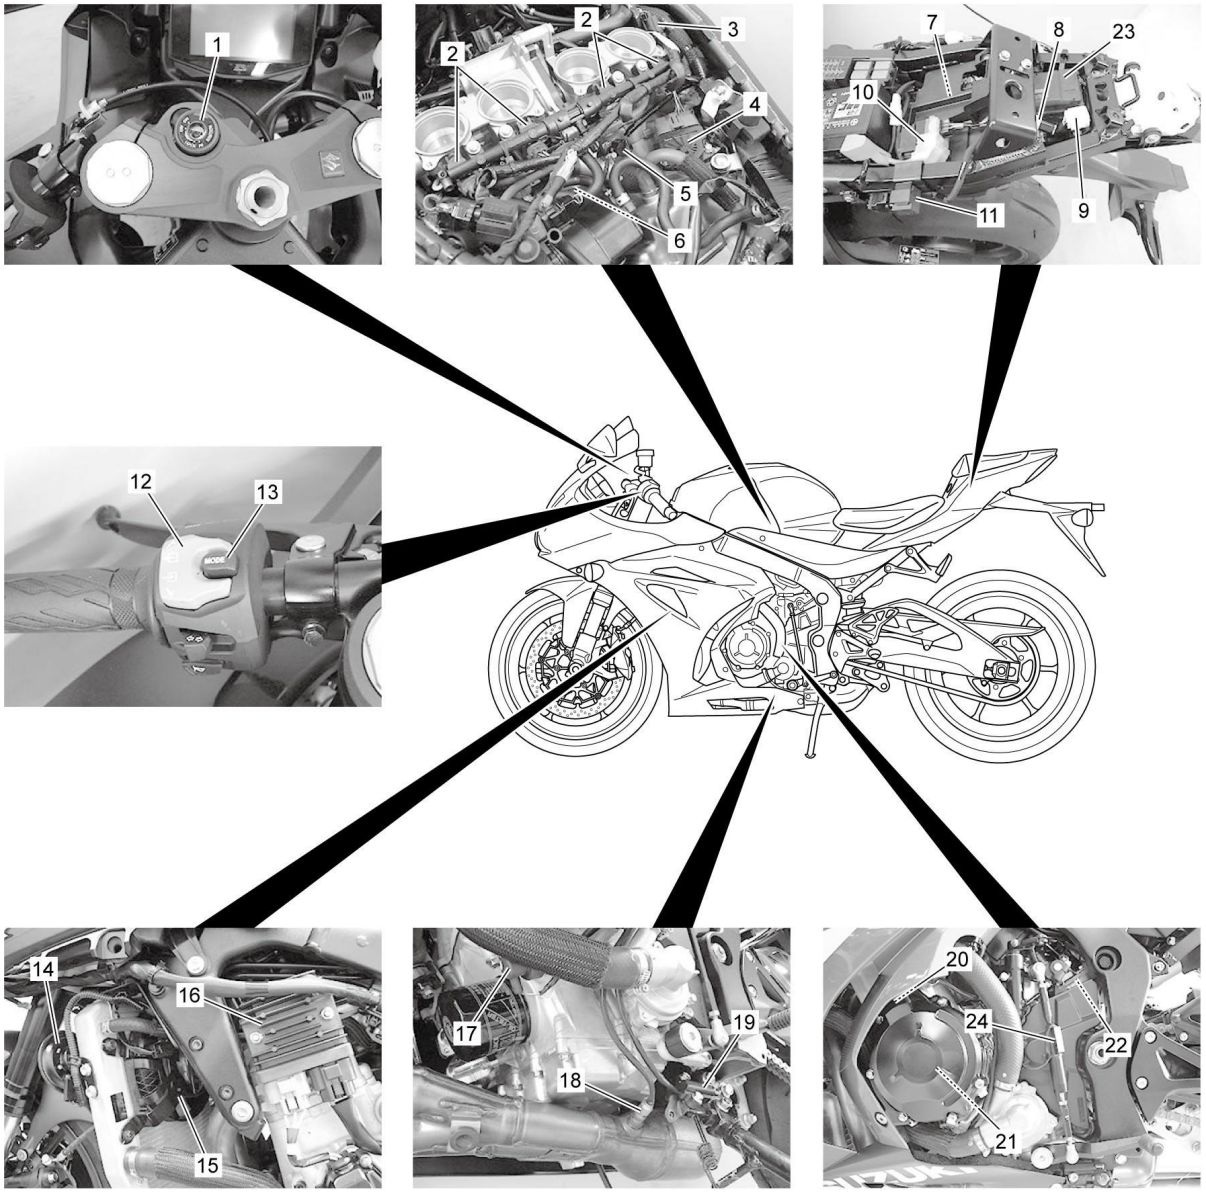

1. Ignition switch	9. Mode select coupler (6P)	17. Oil pressure switch
2. Primary fuel injector	10. Starter relay/Main fuse	18. HO2 sensor
3. TP sensor	11. AP sensor	19. Side-stand switch
4. Accelerator position sensor	12. Select switch	20. CKP sensor
5. ECT sensor	13. Mode switch	21. Generator
6. Starter motor	14. Horn	22. GP sensor
7. ECM	15. Cooling fan motor (LH)	23. EXCVA / EXCVA position sensor
8. Mode select coupler (2P) (With ABS)	16. Regulator/rectifier	24. Gearshift sensor (If equipped)