




Brock's Performance • 4064 E. Patterson Road • Dayton, OH 45430 • Phone: 937-912-0054 • Fax: 937-912-0062

Suzuki GSX-R1000 (17-18) PAIR Block-Off Cap Installation Instructions

The black cap (#831621) included with your exhaust system purchase is used to block off the flow of fresh air into the exhaust system preventing 'deceleration pop'. Blocking of the PAIR system is also required for proper fuel tuning of the bike.

Installation Instructions:

- Remove seat and front frame covers. Prop up fuel tank and remove airbox (see factory service manual).
- Be careful to avoid debris entering the throttle bodies; cover with clean rags while working.
- Locate the PAIR hose on the right-hand side of the airbox (see Figures 1 and 2).
- Install the supplied cap onto the PAIR nipple located on the underside of the airbox (Figure 3).
- Lubricate the block-off cap/nipple with WD-40 or Windex. Place the PAIR hose over the block-off cap/nipple and install OEM hose clamp (See Figure 4).
- Install the airbox. Lower the fuel tank. Install front frame covers and seat (see factory service manual).

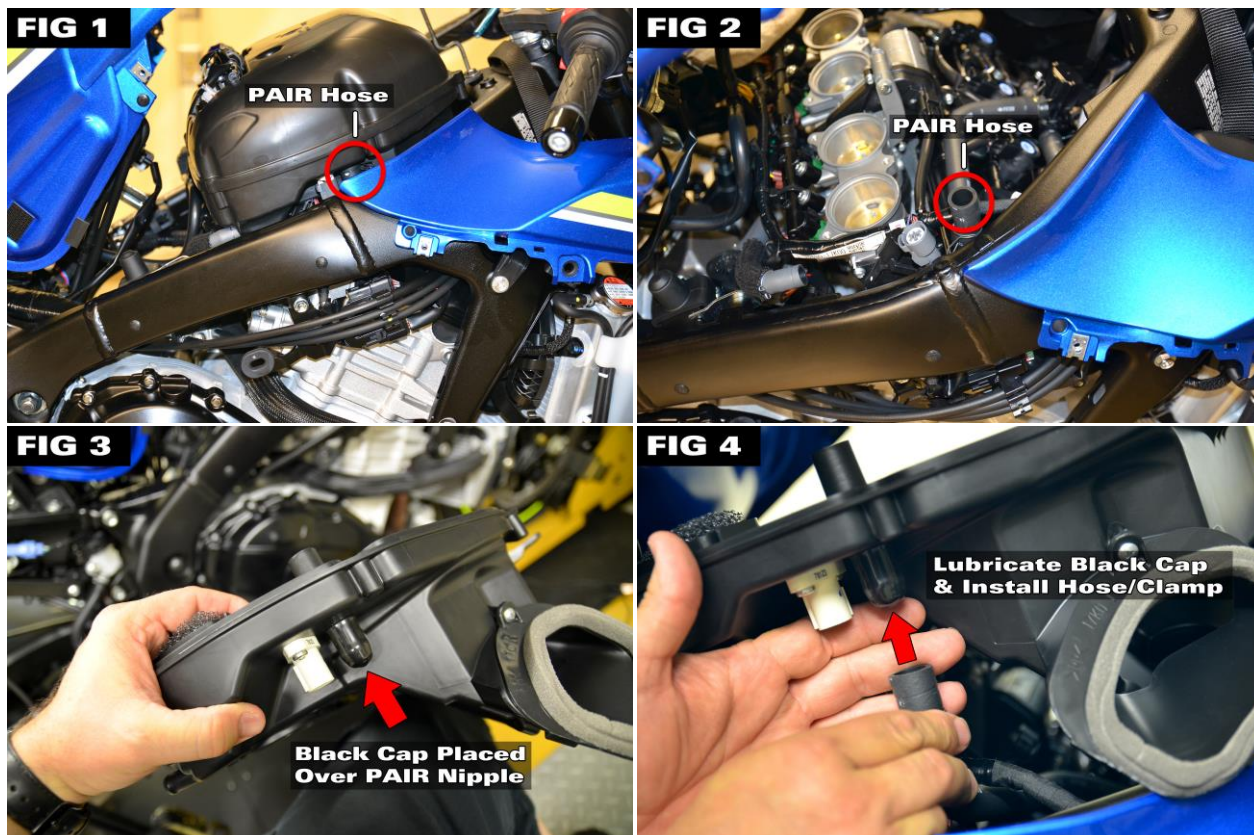

All Brock's Performance products are designed for closed-course racetrack use ONLY!

For more information on Brock's Performance Warranty and Terms and Conditions: www.BrocksPerformance.com
> About Us > Terms and Conditions

For Questions and Comments: www.BrocksPerformance.com > Customer Service > Contact Us
or call the Tech Line 937-912-0054