







Brock's Performance Products • 4064 E. Patterson Road • Dayton, OH 45430 • Phone: 937-912-0054 • Fax: 937-912-0062

Installation Instructions for 2009 GSXR 1000 PAIR Block-Off BPP-S1308-CAP

BPP-S1308-CAP is used to block off emissions (PAIR) to help prevent 'deceleration pop' and also prevents ram-air pressure loss from the airbox after blocking the PAIR. It will be necessary to lift the air box up to access the PAIR valve hose. Refer to a factory service manual for more detailed information.

1. Lift and prop gas tank.
2. PAIR valve hose location on air box. See figure 1.
3. Remove air box cover, air filter, and velocity stacks from inside air box. *Be very careful to not drop anything into the throttle bodies, debris can destroy your engine. Cover throttle bodies with clean rags.* See figure 2.
4. Remove hose and sensor from rear of air box. See figure 3.
5. Remove electrical connection from left side of air box. See figure 4.
6. Lift air box and remove PAIR valve hose from port. See figure 5.
7. Press the BPP-S1308-CAP partially into the hose. Wet cap a little with Windex and use a 3/8" drive extension to push in. See figure 6 & 7.
8. Push hose onto port of air box and secure with clamp. See figure 8.
9. Reinstall air box and components from steps 3 to 5.

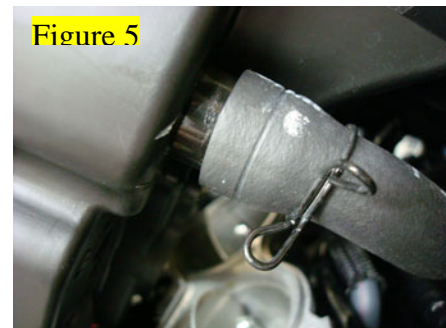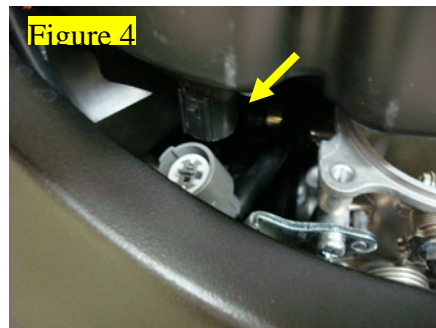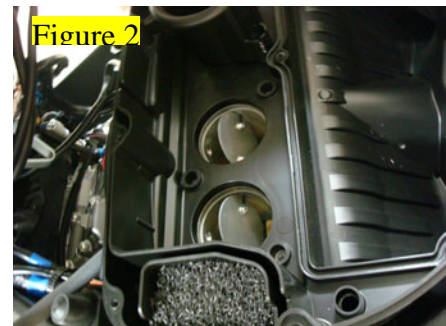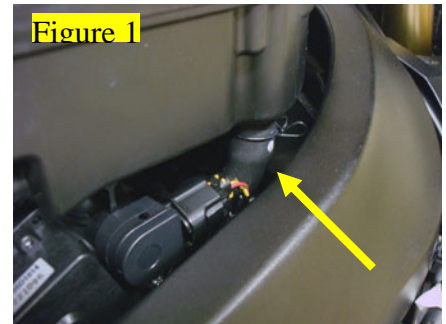

Brock's Performance Products are designed for Closed-Course Racetrack use ONLY!

For more information go to www.BrocksPerformance.com, click: Installation Instructions

email: advice@BrocksPerformance.com or call the office at 937-912-0054

Brock's Performance Products policies and warranty information: www.BrocksPerformance.com, click: Policies