



[Brock's Performance • 4064 E. Patterson Road • Dayton, OH 45430 • Phone: 937-912-0054 • Fax: 937-912-0062](#)

YAMAHA R1/M (15-18) PAIR BLOCK-OFF CAP INSTALLATION INSTRUCTIONS

The black cap is used to block off the flow of fresh air into the exhaust system preventing 'deceleration pop'. Blocking the PAIR system is also required for proper fuel tuning of the bike.


1. Remove the seat, fuel tank covers, fuel tank, and airbox to fully access the PAIR valve hose (*see factory service manual for removal instructions*).
2. Locate the PAIR valve hose on the right side of the airbox (Fig 1)
3. Lubricate the cap with Windex\WD-40 and use a 3/8" drive extension\sharpie marker and push the cap into the hose (Fig 2).

Note: Insert the cap far enough (at least 1") to allow for the hose to be reinstalled on the airbox.

4. Reinstall the airbox and attach the PAIR valve hose using the OEM spring clamp.
5. Reinstall the fuel tank, fuel tank covers, and seat.



For additional installation support please refer to the OEM service manual.

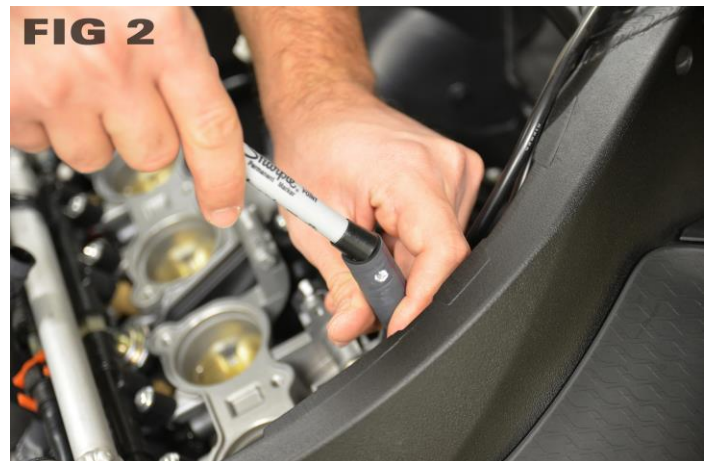

ALL BROCK'S PERFORMANCE PRODUCTS ARE DESIGNED FOR CLOSED-COURSE RACETRACK USE ONLY!

For more information on Brock's Performance Warranty and Terms and Conditions:

[BrocksPerformance.com](#) > [Brock's Support](#) > [Customer Service](#) > [Terms and Conditions](#)

For Questions and Comments:

[BrocksPerformance.com](#) > [Brock's Support](#) > [Customer Service](#) > [Contact us](#) or call 937-912-0054