



Brock's Performance Products • 4064 East Patterson Road • Dayton, OH 45430 • Phone: 937-912-0054 • Fax: 937-912-0062

Installation Instructions for BMW S1000RR PAIR Block Off

The supplied red plug is used to block off the PAIR to help prevent 'deceleration pop'. Refer to a factory service manual for more detailed information.



1. Remove the seat; loosen the two (2) mounting screws under the rear edge of the seat pointed at by the red arrows. Pull the edge of the seat foam forward to expose the screws. Lift the rear of the seat to clear the tail and slide the seat rearward to remove. See figure 1.
2. Remove the right side fuel tank trim; remove the three (3) mounting bolts from the upper tank cover. Remove the three (3) mounting bolts from the side trim panel. The side trim panel pulls out at the front and slides forward to remove. The red circles show the mounting bolts that need to be removed. See figure 2.
3. PAIR hose location on air box. See figure 3.
4. Press the sides of the lock (red arrows) and pull outward (yellow arrow) to remove the hose from the air box. See figure 4.
5. Insert the plug into the hole where the hose connects to the air box. See figure 5.
6. Replace the hose, side trim and seat.



Figure 1

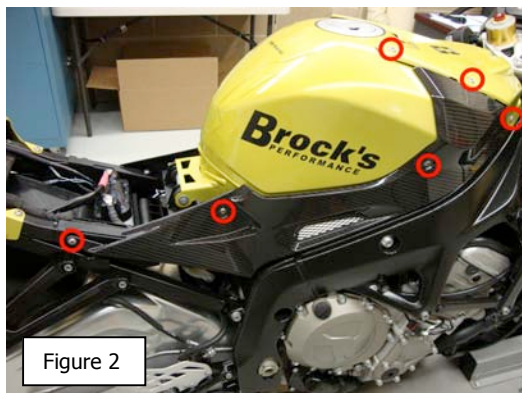


Figure 2



Figure 3

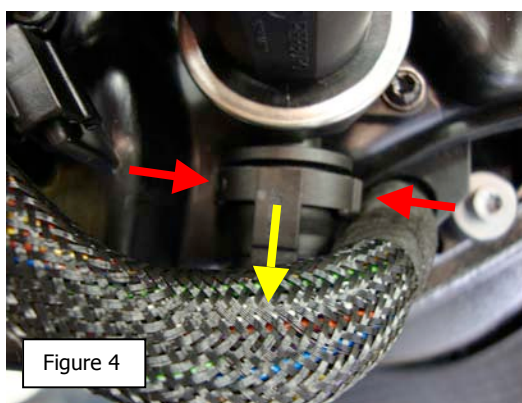


Figure 4

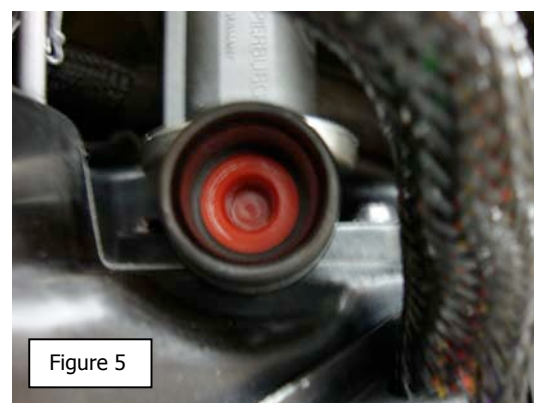


Figure 5

Brock's Performance Products are designed for Closed-Course Race Track use ONLY.

Brock's Performance Products policies and warranty information: www.BrocksPerformance.com

For additional information: Check our Information Forum at www.BrocksPerformance.com

E-mail advice@BrocksPerformance.com or call the Order Line 937-912-0054.