



[Brock's Performance](#) • 4064 E. Patterson Road • Dayton, OH 45430 • Phone: 937-912-0054 • Fax: 937-912-0062


Suzuki GSX-R1000 (09-16) PAIR Block-Off Cap Installation Instructions

The black cap included with your exhaust system purchase is used to block off the flow of fresh air into the exhaust system preventing 'deceleration pop'. Blocking of the PAIR system is also required for proper fuel tuning of the bike.

For additional installation support please refer to the OEM service manual.

Installation Instructions:

- Remove seat and front frame covers. Lift and prop up fuel tank.
- Locate the PAIR hose on the right-hand side of the airbox. (Fig 1)
- Remove air box cover, filter, and velocity stacks.
 - Be careful to avoid debris entering the throttle bodies; cover with clean rags while working.
- Remove hose and sensor from rear of airbox. (Fig 2)
- Remove electrical connector from left side of airbox. (Fig 3)
- Lift the airbox and disconnect the PAIR hose from the nipple. (Fig 4)
- Lubricate the block-off cap/nipple with WD-40 or Windex.
- Install supplied cap into the pair hose using a dull ended object (ex. Sharpie Marker or 3/8" extension). (Fig 5)
- Reinstall the PAIR hose over the nipple and secure with the OEM hose clamp. (Fig 6)
- Reinstall the airbox, velocity stacks, filter, and air box cover. Lower fuel tank. Install front frame covers and seat.

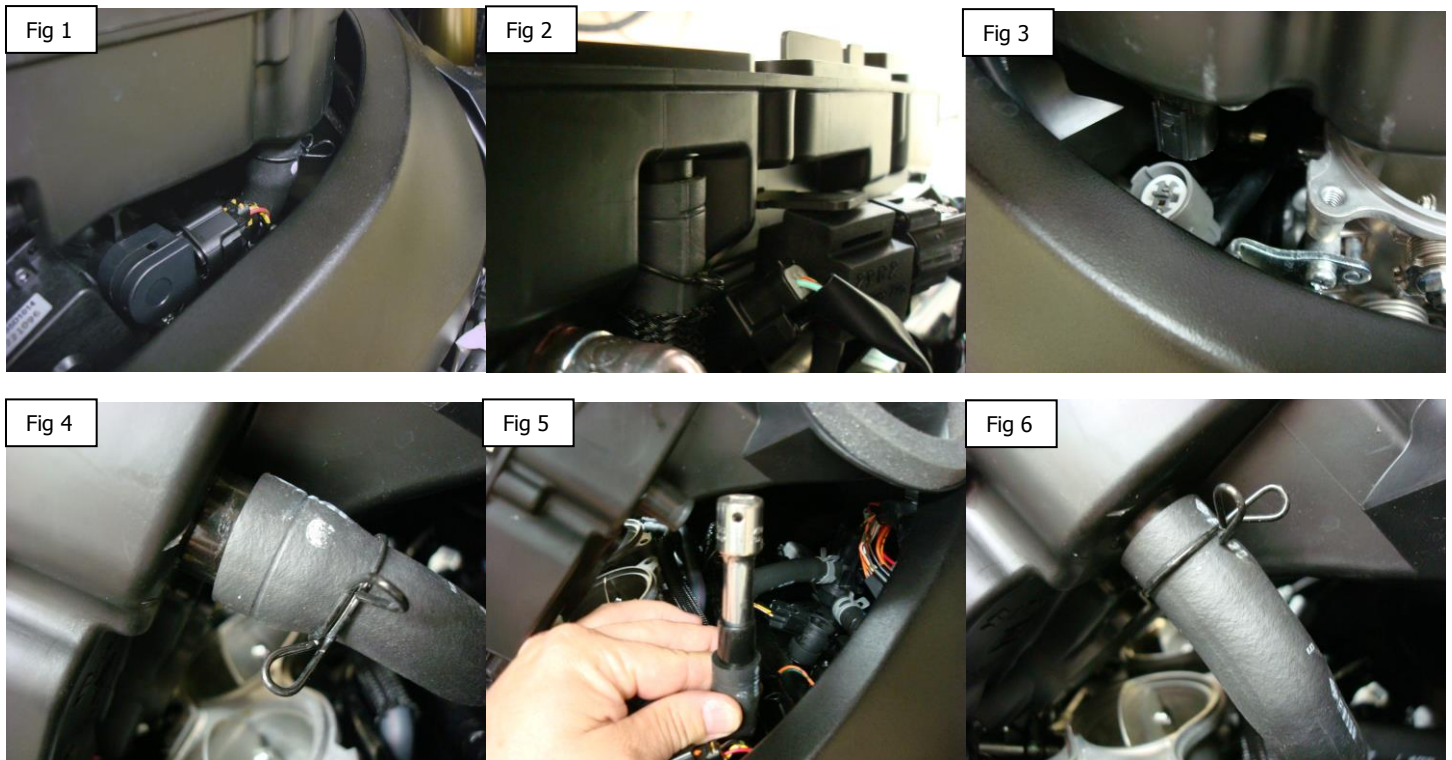

ALL BROCK'S PERFORMANCE PRODUCTS ARE DESIGNED FOR CLOSED-COURSE RACETRACK USE ONLY!

For more information on Brock's Performance Warranty and Terms and Conditions:

[BrocksPerformance.com](#) > [Brock's Support](#) > [Customer Service](#) > [Terms and Conditions](#)

For Questions and Comments:

[BrocksPerformance.com](#) > [Brock's Support](#) > [Customer Service](#) > [Contact us](#) or call 937-912-0054