Brock's Performance • 4064 E. Patterson Road • Dayton, OH 45430 • Phone: 937-912-0054 • Fax: 937-912-0062

# Suzuki GSX-R1000/R (17-27) PAIR Block-Off Cap Installation Instructions

**The black cap included with your exhaust system purchase is used to block off the flow of fresh air into the exhaust system preventing 'deceleration pop'. Blocking of the PAIR system is also required for proper fuel tuning of the bike.**

**For additional installation support please refer to the OEM service manual.**

## Installation Instructions:

- Remove seat and front frame covers. Prop up fuel tank and remove.
- Be careful to avoid debris entering the throttle bodies; cover with clean rags while working.
- Locate the PAIR hose on the right-hand side of the airbox (Fig 1 and 2).
- Install the supplied cap onto the PAIR nipple located on the underside of the airbox (Fig 3).
- Lubricate the block-off cap/nipple with WD-40 or Windex. Place the PAIR hose over the block-off cap/nipple and install OEM hose clamp (Fig 4).
- Install the airbox. Lower the fuel tank. Install front frame covers and seat.

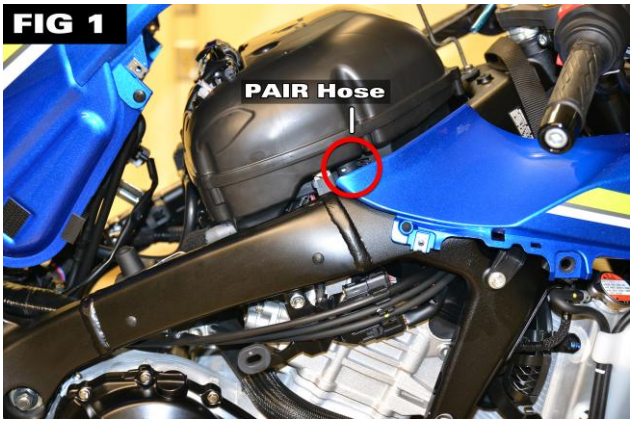


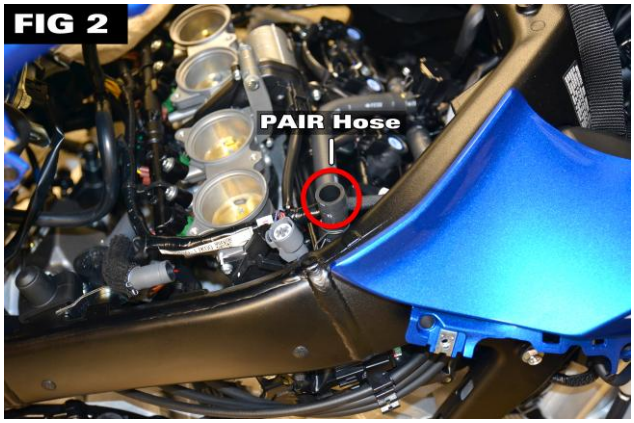

**ALL BROCK'S PERFORMANCE PRODUCTS ARE DESIGNED FOR CLOSED-COURSE RACETRACK USE ONLY!**

For more information on Brock's Performance Warranty and Terms and Conditions:
**BrocksPerformance.com > Brock's Support > Customer Service > Terms and Conditions**
For Questions and Comments:
**BrocksPerformance.com > Brock's Support > Customer Service > Contact us or call 937-912-0054**