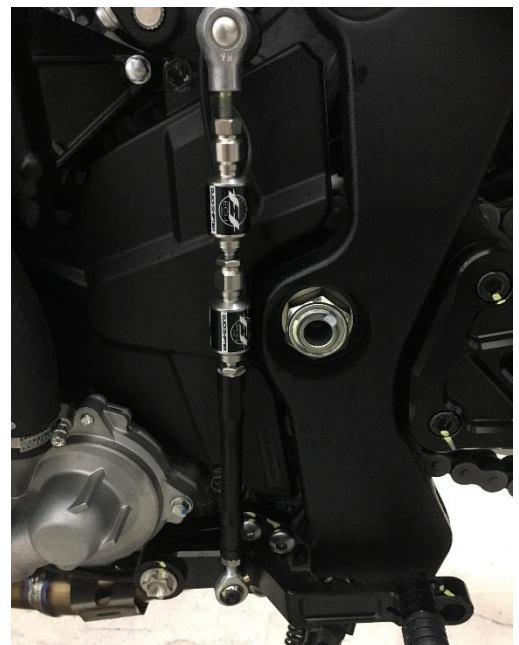


## Installation Guide: FT ECU 2017 Suzuki GSXR1000 Auto-Blip Kit

- Step 1:** The harness will plug into the Tip Over sensor which you will find underneath the back of the gas tank.
- Step 2:** Disconnect the tip over sensor and connect our harness. Then take the end you just removed and connect it to our harness. (See Fig1.)
- Step 3:** Mock up the shift sensors with the provided rod to see the proper overall length. Cut the rod to fit at the notches. The shift sensors should be above the rod. (See Fig2.)
- Step 4:** Install the provided Push and Pull sensors to match your shift pattern. Depending on your shift pattern and rearsset configuration you may need to connect the Push or Pull sensor to the QSS side of your harness. The act of upshifting will either push or pull on the shift rod which determines which sensor to connect to the QSS side of your harness.
- Note:** Be sure to have QS enabled through the dash and **R Model Features** set to **"TRUE"** in the file. If one sensor is working and the other isn't try swapping the connectors to the sensors.



**Fig1.** Harness in Tip Over Sensor



**Fig2.** Sensors & Rod Installed