Brock's Performance • 4064 E. Patterson Road • Dayton, OH 45430 • Phone: 937-912-0054 • Fax: 937-912-0062

BMW S1000RR (10-26) PAIR BLOCK-OFF CAP INSTALLATION INSTRUCTIONS

The red cap is used to block off the flow of fresh air into the exhaust system preventing 'deceleration pop'. Blocking the PAIR system is also required for proper fuel tuning of the bike.

For additional installation support please refer to the OEM service manual.

1. Remove two bolts securing the seat.
2. Remove the right side fuel tank trim (Fig 1).
3. Locate the PAIR hose at the airbox (Fig 2).
4. Press on both sides of the hose and remove it from the airbox (Fig 3).
5. Insert the supplied red cap into the hole where the hose connects (Fig 4).
6. Reinstall the PAIR hose, side fuel tank trim, and seat.

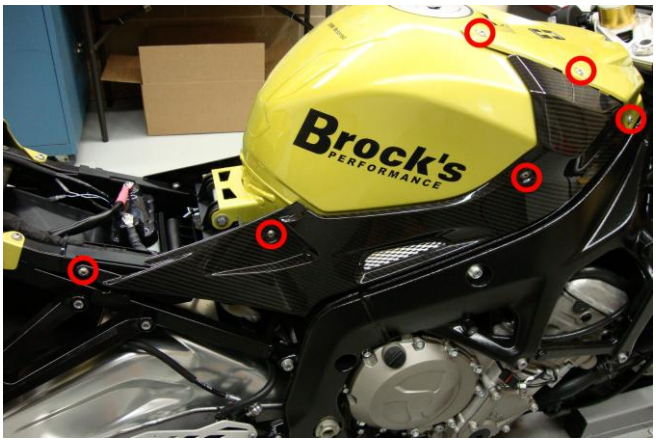

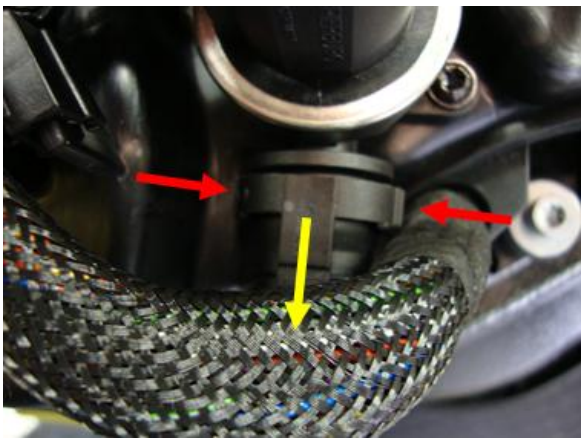

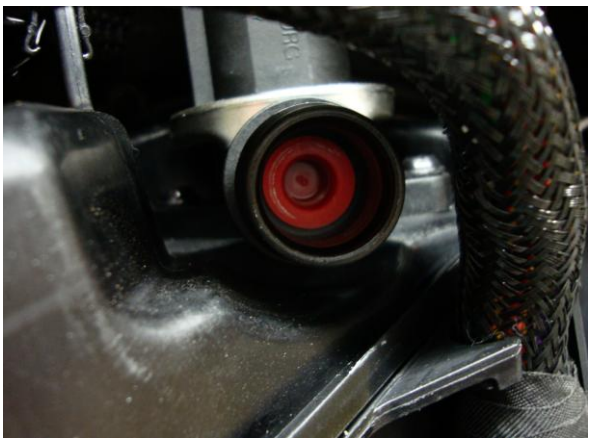

ALL BROCK'S PERFORMANCE PRODUCTS ARE DESIGNED FOR CLOSED-COURSE RACETRACK USE ONLY!

For more information on Brock's Performance Warranty and Terms and Conditions:
BrocksPerformance.com > Brock's Support > Customer Service > Terms and Conditions
For Questions and Comments:
BrocksPerformance.com > Brock's Support > Customer Service > Contact us or call 937-912-0054